

TKS Digital Decoder Setup

INITIAL SETUP - DIGIPAC WITH MOVIE CHANNEL

Go to the Initial Setup section of the decoder's manual, follow steps 1 - 3 as listed, then use the instructions outlined below.


Decoder manual - step 3:

"Specify the settings for your TV set..."

NOTE: Do not change the default settings, scroll down to **OK**, then press the **OK** on the remote.


1. Automatic Search Menu.

Using the remote's arrow keys, scroll down and highlight **End Frequency**, then scroll right to select **K35 - 586 MHz**.

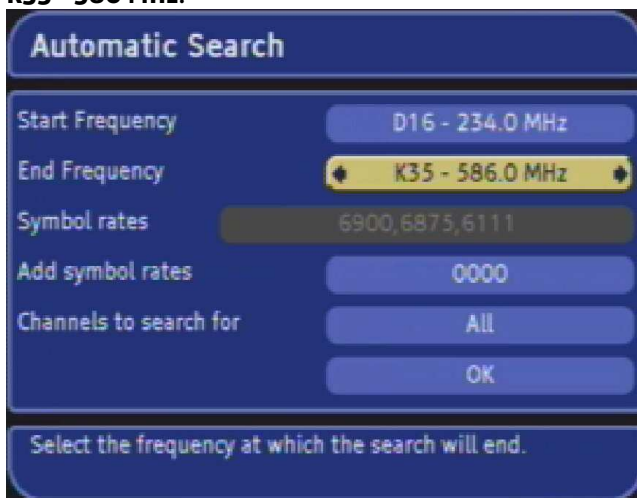

STEP 1 - SCROLL RIGHT TO SELECT K35 - 586.0 MHZ

2. Now the **Start Frequency** may be adjusted, highlight the Start Frequency selector, then scroll right to **K35 - 586 MHz**.

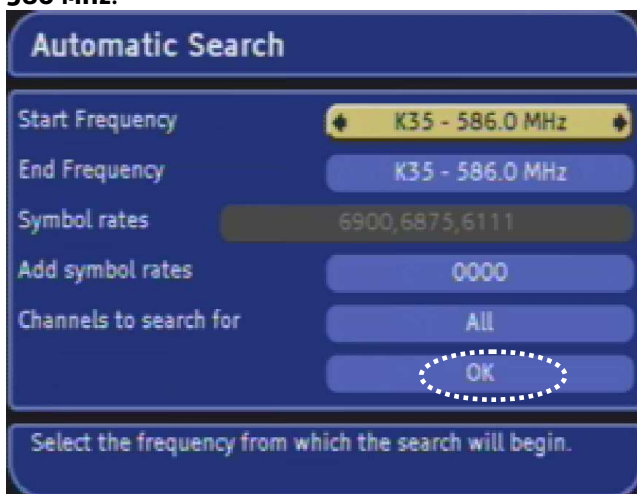

TIP: Even though the start and end frequencies are the same (K35 - 586.0 MHz), the End Frequency must be defined first. If you have not changed the End Frequency go back to step 1.

3. Scroll down and highlight **OK**, then press **OK** on the remote control.

The decoder will now initiate a new channel search.

4. The **Scan completed** screen indicates that that the decoder has found the DigiPac channels and is ready to save them. Press **OK** on the remote control to add the channels and finalize the setup.



STEP 4 - SCAN COMPLETED - PRESS OK ON REMOTE

5. **Installation complete** screen. Confirm the installation and exit the setup menus by pressing **OK** on the remote control.



STEP 5 - PRESS OK ON THE REMOTE CONTROL

THE INITIAL DECODER SETUP IS COMPLETED.

ADDITIONAL INFORMATION ON THE DECODER'S SECURITY SETTINGS CAN BE FOUND ON THE NEXT PAGE.

more TKS decoder setup tips...

⌘ Parental Control: protection against misuse by minors.

- All DigiPac programming is equipped with parental control security functionality. To view DigiPac programming, a PIN must be entered first.
- When the decoder is initially set-up, the parental control feature will be turned on to “**active**” as the default setting after the device has been placed in the standby mode at least once (power off).
- The security PIN is 4-digits, the **factory default** is **0000**. It is recommended to assign a new PIN after the initial set-up, please refer to the instruction manual.
- Once parental control is activated, the security PIN is required each time the decoder is turned on, and with each program change.
- Parental control may also be deactivated in the decoder’s **Safety** menu so that programming is accessible without the use of a PIN. Deactivation can be done either by setting the security to the **OFF** position, or by setting the minimum viewing age to **18 years**.
- It is also possible to set a device-lock on just the decoder. That way a PIN is required only to turn the decoder on. Once on, the PIN will not be needed to switch back and forth among programs.

⌘ Having trouble, need help?

- Make sure that you are using the original connections cords that were supplied with the decoder.
- Is everything hooked-up correctly? Please refer to the diagram in the instruction manual.
- Is your TKS cable TV subscription up to date? DigiPac programming is available only with an active TKS Cable TV subscription that includes the Movie Channel.
- Need assistance? Please call the TKS Hotline from your home for over-the-phone troubleshooting: **TKS Hotline 01804 857 762** (0.20 EUR/call)*

*An additional charge would apply if you request a technician to come to your home to setup the digital decoder.