SETUP GUIDE

FRITZ!Box Fon WLAN 7330



FRITZ!Box Fon WLAN 7330



DSL CABLE



LAN CABLE



AC ADAPTER



PTER

(((p))) First set up a standard "wired" Internet connection per these instructions, then proceed with a wireless network configuration.

WIRELESS

Once your Internet connection is established, visit the Support section at the TKS website to download the FRITZ!Box wireless setup guide.

1. Connect to a power outlet.

Connect the supplied **AC adapter** to the FRITZ!Box's **POWER** port and then to a suitable AC power outlet. The green **Power LED** will begin flashing, indicating that the device is powered up.

2. DSL connection.

Connect the supplied **DSL cable** to the socket labeled DSL/TEL, plug the other end into the center slot of your TAE telephone receptacle.

The FRITZ!Box will then automatically self initialize, this may take a few minutes.

IMPORTANT: DO NOT INTERRUPT THIS PROCESS!

Your FRITZ!Box is ready for use when the **Power LED** stops flashing and remains lit, and when the **Info LED** is illuminated.

3. Connect your telephone and computer.

Plug a standard analog telephone into the **FON 1** socket. You can then pick up your phone and dial.

No dial tone? Hang up and then retry in a few minutes. In some cases it may take a few extra minutes to establish the first phone connection.

Connect the supplied **LAN cable** to one of the yellow **LAN** ports. Plug the other end of the cable into the LAN port of your computer. Now just launch your web browser and start surfing.

Your setup and activation is now complete!

TKS Customer Service & Technical Support 24-hour technical support is only a phone call away.

Service Hotline: 0631 3522 499*

www.tkscable.com

TKS A KABEL DEUTSCHLAN