



# easyTV flex *quickstart guide*

Cloud DVR | Replay On Demand | Start Over | Timeshift

easyTV flex can offer you the freedom and convenience to watch the television shows that you want to watch – when you want to watch them. This guide is intended to provide you with a quick orientation of the easyTV feature set.

Please note that as you become more familiar with easyTV flex, you may discover that certain features and operations can be accessed in more than one way. For example via the on-screen menu, or by pressing a dedicated function key. Either way, we encourage you to do some exploring on your own to see what works best for you. Try different things, there's no right or wrong, and you can't break anything!

**General compatibility note:** easyTV flex features will work with any and all of the channels that provide up-to-date EPG listings. Channels without EPG data are unfortunately not compatible.

## Cloud DVR | Record your favorite shows

Different types of recordings are possible. For example, a live real-time recording of the show that you are currently watching, or a scheduled recording via the on-screen EPG.

### Real-Time Recording

To start recording the show that you are currently watching, simply press the remote's red **RECORD** key. To stop, edit, or delete the recording, press the **RECORD** key again to display all of the available options.

### Scheduled Recording

To record a program scheduled to air at a future time and date press the remote's **EPG** key, select the desired program, press **OK** and then select **Record**. In the EPG you'll notice that all of your scheduled recordings will be indicated with a record symbol next to its title.

**Navigating the EPG:** Scroll **UP** and **DOWN** to display different channels, scroll **RIGHT** to advance forward in the program timeline.



## easyTV flex | Cloud DVR (continued)

### Manage and view your recordings

All of your recordings and advanced DVR features is accessed in the main menu's **Recordings** section: press the remote's **MENU** key and select **Recordings**. Select **Schedules** to view your upcoming or scheduled recordings; select **Recordings** to access your completed recordings which are now ready to watch.

**Watch a recording:** select the recording from the list and press **OK**. Select **Watch** and press **OK**

**Recording pause/play:** press the yellow **PAUSE** key, press it again to resume watching

**Stop watching:** press the remote's green **STOP** key

**Resume playback:** If you decide to stop watching a recording, your viewing progress is automatically bookmarked so that you can resume watching right where you left off!

DVR capacity: 15 hours max.

Recording validity: 3 months

Fast forward/reverse: not available

### Replay On Demand | Go back in time up to 7 days

To watch a previously aired program, simply navigate backwards in the EPG timeline to the desired show and press **OK**, then select **Watch**.

### Navigating the EPG

**Display EPG:** press the **EPG** key

**Change channels:** **UP** / **DOWN** keys

**Back / forward in time:** **LEFT** / **RIGHT** keys

### While watching

**Pause playback:** yellow **PAUSE** key

**Stop playback:** green **STOP** key

**Forward/reverse:** not available

### Start Over | Restart a show from the beginning

To restart a live broadcast that is currently in progress from the beginning, press the **INFO** key and select **Start Over**. To return to the live broadcast, press the green **STOP** key.

### Timeshift | Pause a live broadcast

Press the remote's yellow **PAUSE** key to pause a live television broadcast, press **PAUSE** again to resume watching. Press the green **STOP** key to exit timeshift and return to the live broadcast.

